 
 
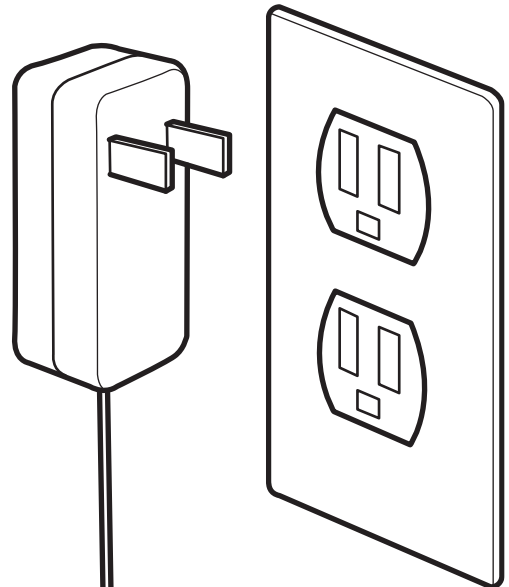 


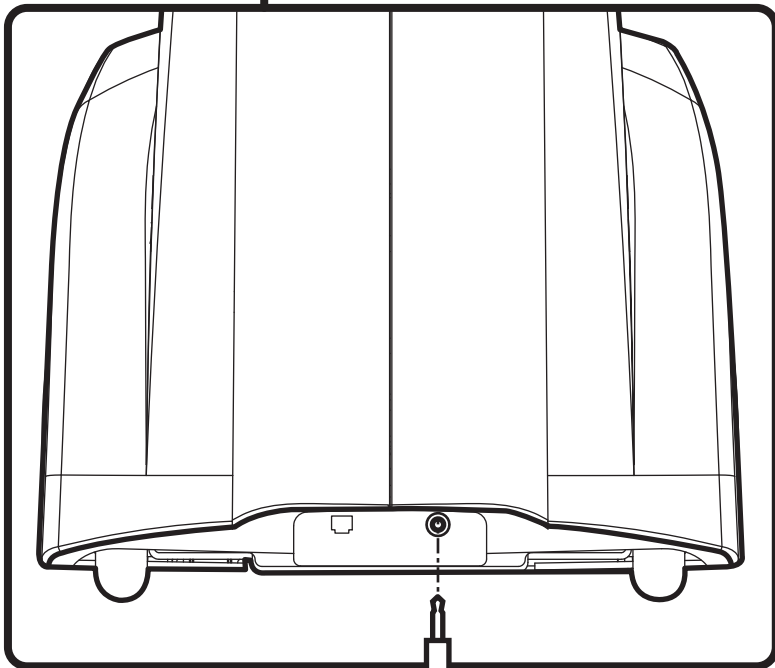

## AC Adapter

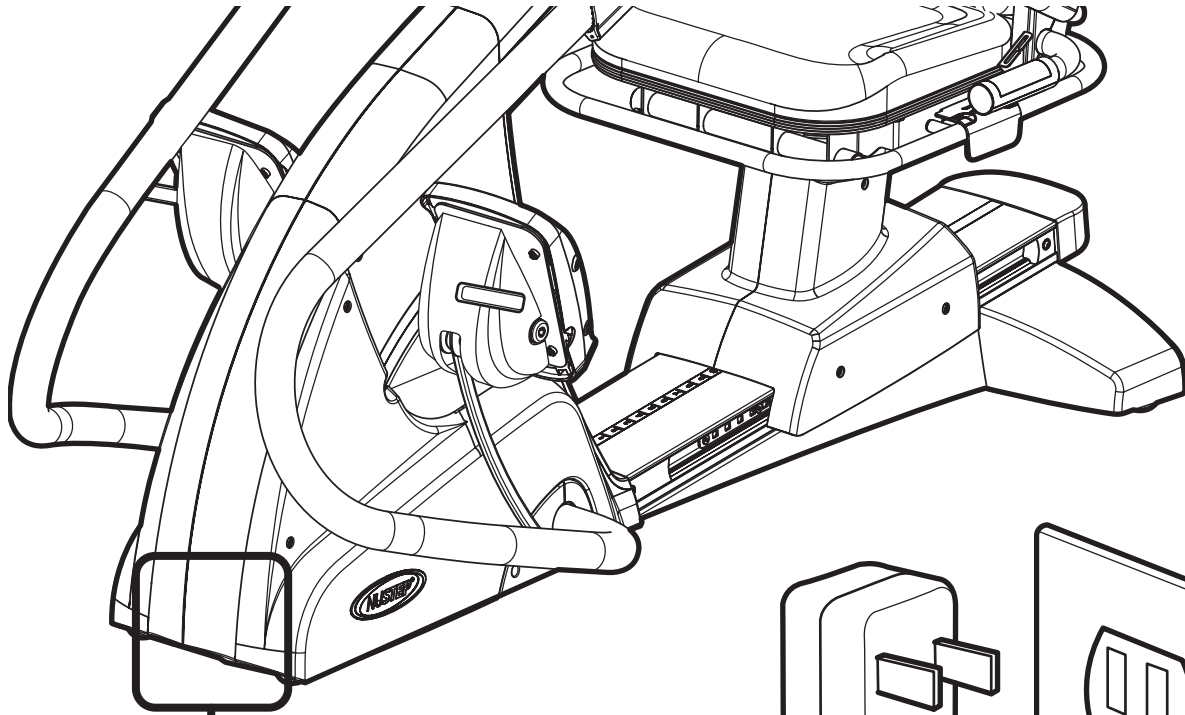

If low battery popup occurs on T5, please plug in AC adapter or use at faster stepping speeds.